

F206 User manual

Real-time tracking | Remote Training Collar Tracer

Document information

Title	F206 Real-time tracking Remote Training Collar Tracer	
Document type	User manual	
Document number	SL-22050245	
Revision and date	V1.01	17-May-2022
Disclosure restriction	Public	

Revision History

Version	Description	Make	Date
V1.01	Initial version	Wilson	20220517

Product list

NO.	product name	Amount	Remark
1	GPS tracker	1	
2	Charging cable	1	
3	Screwdriver	1	
4	Pedestal	1	
5	Charger	1	
6	Operation instruction	1	
7	Warranty card	1	
8	Conformity certificate	1	

SKYLAB reserves all rights to this document and the information contained herein. Products, names, logos and designs described herein may in whole or in part be subject to intellectual property rights. Reproduction, use, modification or disclosure to third parties of this document or any part thereof without the express permission of SKYLAB is strictly prohibited.

The information contained herein is provided “as is” and SKYLAB assumes no liability for the use of the information. No warranty, either express or implied, is given, including but not limited, with respect to the accuracy, correctness, reliability and fitness for a particular purpose of the information. This document may be revised by SKYLAB at any time. For most recent documents, visit www.skylab.com.cn.

Copyright © 2022, Skylab M&C Technology Co., Ltd.

SKYLAB® is a registered trademark of Skylab M&C Technology Co., Ltd in China

Contents

1. Product Introduction.....	4
2. Functional Characteristics.....	4
3. Product Parameter.....	4
4. LED Indicator Definition.....	5
5. Device Start up.....	6
6. APP and SMS instructions.....	7
7. Download phone APP.....	9
8. Log in by website and phone APP.....	10
8.1 Log in by Phone APP.....	10
8.2 App App usage introduction.....	11
8.2.1 Dog training function.....	12
8.2.2 How to use health Overseer interface.....	13
9. Faults & The solutions.....	13
10. Cautions.....	14
11. Contact information.....	14

1. Product Introduction

This product is based on LTE / GPRS network and GPS satellite positioning system. It is the most technologically advanced dual positioning of GPS and AGPS. IPX-68 waterproof professional is designed for individuals and hound. A new pet tracker and activity state 4G GPS locator for pets.



Figure 1 F206 Product picture

2. Functional Characteristics

- ◆ Real-time tracking / AGPS assisted positioning;
- ◆ Upload methods: timing, real-time mode;
- ◆ Vibration dog training in multiple modes, and its own speaker;
- ◆ Virtual fence / history track playback / displacement / low power alarm etc., alarm data upload to cloud background;
- ◆ Real-time health oversee (sleep, step counting);
- ◆ LED indicator: charging, GPS, communication, dog training status;
- ◆ Magnetic charging, safe, waterproof and anti-static

3. Product Parameter

Product name	4G Pet (Dog training) GPS Tracker
Model	F206

Suitable Object	Dog and other medium or large-sized animals
Support the spectrum (Asia/Overseas optional)	FDD-LTE:B1 B2 B3 B4 B5 B7 B8 B12(17) B20 B28 TDD-LTE:B38 B39 B40 B41 WCDMA:B1 B2 B5 B8 GSM:850/900/1800M/1900
Network	GSM/GPRS/LTE
Battery	Polymer lithium battery
Start-up time	Cold start 35s-80s
	Hot start 1s
LTE Module GPS accuracy	10m
	CPU: SC9820E
GPS sensitivity	-159dBm
Operating temperature	-20℃~70℃
Operating humidity	5%-95% Noncondensing
Storage temperature	-40℃ ~75℃
Power Charge	Magnetic suction 5 v / 1
SIM card	Nono card, self-elastic insert card
Dimension	70*39.5*17mm
Weight	65g

4. LED Indicator Definition

Red Indicator: Power charge and Find dog

Status of indicator	Meaning
Flash	Normal working
Not bright	Standby or fault

Green indicator - GSM/LTE signal indicator

Status of indicator	Meaning
Continuously in bright status	Communication initialization

Flash	Communication is normal
Not bright	Standby or fault

Blue light -GPS signal indicator

Status of indicator	Meaning
Continuously in bright status	Searching for GPS signals
Flash	GPS signal is normal
Not bright	Standby or fault

Note: When the device is in power-saving sleep mode, the device will be shut down after 5 minutes (configurable) if there is no operation indicator.

5. Device Start up

1. Open the USB plug by hand and insert a 4G SIM card with the chip facing down.



2. After holding down the power button for three seconds, the device will start up.
3. Set admin number, by sending a SMS command to the SIM card inside device. For example:
admin123456 86132***** (86132*****should be your phone number).

Note:

- (1) Charge the battery for 8-12 hours on the first time. Please use the charger and battery that are configured by the manufacturer. The standard configuration battery is a lithium battery.
- (2) The battery of this product is a lithium battery that contains harmful chemical components and may explode. Please do not force it, puncture it and put it into fire.
- (3) Please charge in time to keep the equipment working properly.

6. APP and SMS instructions

Function	Descriptions	APP support	SMS support	Command Format
Master number	Set the mobile phone number for receiving alarms	YES	YES	admin123456 cell-phone number
Frequency of upload	Set the frequency of uploading device location and other information(Unit: second)	YES	YES	Upload123456 frequency
Time zone	Setting the Device Time Zone	YES	YES	Timezone123456, time zone
Sensitivity to shock	Set vibration sensitivity of equipment	YES	YES	vibxyz123456,3,5,5,5
Power saving mode	In power-saving mode, vibration cannot wake up the device, GPS is off, SMS phone keys can wake up the device for 5 minutes	YES	YES	sleep123456 time
Vibration of dormancy	In vibration mode, the vibration can wake up the device to work for 5 minutes. If the vibration continues, the device will work continuously	NO	YES	sleep123456 shock
Monitor	You can use your mobile phone to monitor the sound around the device	YES	YES	jt
Electronic fence	Electronic fence can be edited through the web page or APP. Warning messages will be sent when the device enters or exceeds the electronic fence	YES	NO	
Low battery alarm	If the built-in battery is less than 3.7V, the device will report a low power alarm	YES	YES	LOW,1 开/LOW,0 关
Time to upload	The device periodically uploads location and other information at a set frequency.(Unit: second)	YES	YES	upload123456,3600
Call the roll	Send the roll call message, the device from the sleep state into the working state, work for 5 minutes, upload	YES	YES	d123456

	location information			
Dormancy online	When the device is sleeping, keep the network connected to ensure that the APP can send commands	NO	YES	gprson123456,1
Dormancy offline	When the device is sleeping, close the network connection and app cannot send instructions	NO	YES	gprson123456,0
To change the domain name, IP	Example Change the domain name or IP address	NO	YES	szcs,123456,domain=a.zg666gps.com:7700
Language settings	Modify the text reply language	NO	YES	lag1(English)lag2(Chinese)
APN settings	Example Set the APN of the device	NO	YES	apn123456, Access Point; apn123456, Access Point, User name ; apn123456, Access Point, User name, Password.
Factory reset	Restore the factory Settings of the device	YES	YES	format
Remote restart	Restarting the device	YES	YES	RST
Parameter Query 1	View software version number, device ID, domain name, APN, network signal, defense status, vibration sensitivity	NO	YES	param1
Parameter Query 2	Check the main control number, SOS number, and defense parameters	NO	YES	param2
Query status	Check battery, network, GPS status, etc	NO	YES	status
Do Not Disturb	Set the do not disturb period, during which the device enters the flight mode	YES	NO	
Turn off do not disturb mode	Cancel the Do not Disturb function	YES	NO	
Step down the switch	This feature is not currently implemented	YES	NO	


Weak vibration	When the command is issued, the equipment will vibrate 10 times, and the vibration intensity is weak	YES	NO	
Moderate vibration	Send the command, the equipment will vibrate 10 times, vibration intensity	YES	NO	
strong vibration	Send the command, the equipment will vibrate 10 times, vibration intensity is strong	YES	NO	
Voice	When the command is issued, the device will beep for 10 consecutive seconds	YES	NO	
Finding indicator light	When the command is issued, the red light of the device blinks continuously	YES	NO	
Language play	The voice in the APP will be delivered to the device to play	YES	NO	
Upgrade instructions	Check whether the software has a new version. If yes, the software is automatically upgraded	NO	YES	checkUpdate

7. Download phone APP



1. Android mobile phone: Scan above QR to download;
2. Ios: search"LKGPS2" in the app store or Google play store to download.

8. Log in by website and phone APP

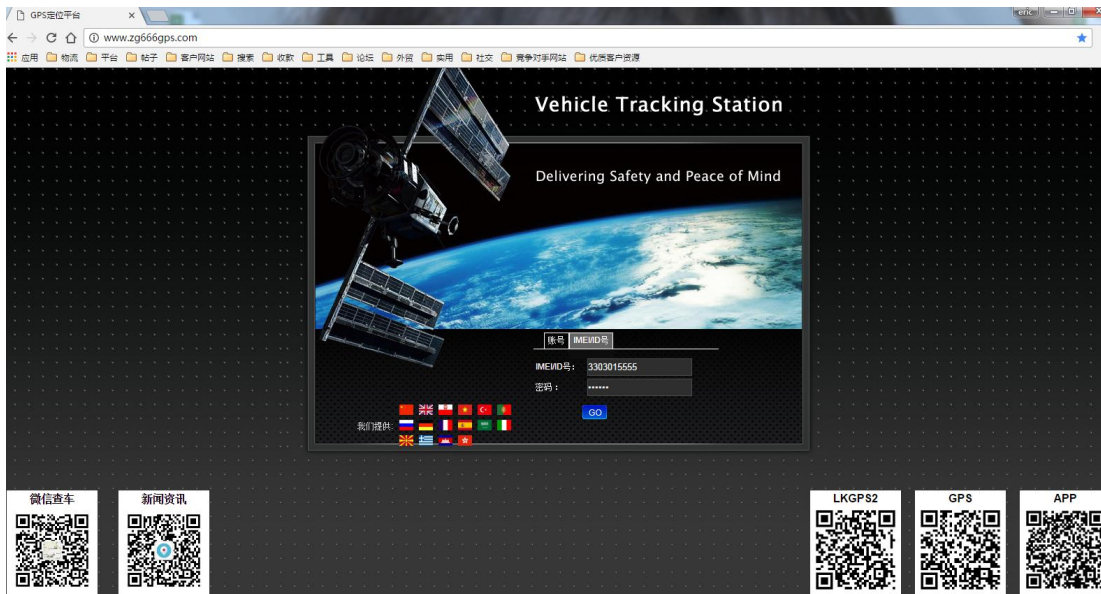

Type www.zg666gps.com/www.lkgps.net in the browser address bar, click the enter key.

Select IMEI, enter 10 digits of device ID, and the default password is 123456. Click GO to log in.

8.1 Log in by Phone APP

Please refer to the picture below:



Select "IMEI / ID login" for the first login, select "666" for the first column of address, input 10 digits on the device barcode, and the default password is 123456, Click "log in" to log in. After logging in, set up and improve the user information, you can use other login methods.

Note:

- (1) The optional items in the address column of the first column: select "666" for domestic users and "lkgps" for foreign users;
- (2) Error "wrong user name or password" appears in the address bar, unable to log in normally.

8.2 App App usage introduction



The settings include: reminder settings (mobile phone sound and vibration settings), password modification, skin replacement, instructions for use (multi version instructions), log out of the current

login.

More settings include: command issuing (instruction 1, instruction 2, instruction 3, instruction 4, instruction 5, instruction 6, instruction 7, instruction 8, instruction 9) Electronic fence, equipment information (equipment name, equipment number, expiration time, equipment model, equipment SIM card number, type, gender, weight, age, birthday, owner name, owner phone number, icon), product description, equipment message.

Instruction: instruction 1, instruction 2, instruction 3, instruction 4, instruction 5, instruction 6, instruction 7, instruction 8, instruction 9.

Health: step counting, sleep

Note: If you need to use a multi machine version of the advanced account, please contact the equipment manufacturer. You can use it after opening the exclusive account. The software operation interface is slightly different.

8.2.1 Dog training function

Instruction set



Operation interface



Send command



Long press rename instruction name

Command setting(edit command name from APP)

Default instruction name	Command function	Vibration mode
--------------------------	------------------	----------------

Command 1	Weak vibration 0.5 s	One Vibration for 0.5s
Command 2	Weak vibration for 10s	Interval Vibration , 0.5s every time , 20times, for 10s
Command 3	Moderate vibration for 0.8s	One Vibration for 0.8s
Command 4	Medium vibration for 0.8s	Interval vibration , 0.8s every time , 13 times for 10s
Command 5	Strong vibration for 2s	One Vibration for 2s
Command 6	Interval vibration For 10s	Interval Vibration, 1.25s every time , 9 times for 10s
Command 7	"Ticking" for 0.5s	One ticking for 0.5s
Command 8	"Ticking" for 10s	Interval ticking, 0.5s every time , 20 times for 10s
Command 9	On: Light flashes	Off: Light turns off

8.2.2 How to use health Overseer interface



9. Faults & The solutions

Q: Start up Fail?

A: Please fully charge the device before turning it on.

Q: The device can not obtain location information?

A: Please place the device in an open area for testing. There is no GPS signal in the room.

Q: How to choose SIM card?

A: The SIM card must support LTE&GSM&GPRS network, please make sure the balance in the card is sufficient and there is enough traffic.

Q: Whether the equipment can be used overseas?

A: Overseas customers need to set the APN before normal use. Edit the SHORT message APN123456 CMNET and send it to the SIM card of the device. Cmnnet is the APN of the mainland carrier.

10. Cautions

Please be sure to follow the instructions when using:

1. Keep the device in a dry environment. The internal circuit may be damaged in a damp environment.
2. Please do not place it in too hot or cold places..
3. lease do not shake the equipment violently during use.
4. If soiled, clean up with a dry cloth. Do not use chemicals or cleaners.
5. Please do not paint the equipment, this may cause internal circuit failure.
6. Do not disassemble or disassemble equipment.

11. Contact information

Skylab M&C Technology Co.,Ltd.

Address: 6 Floor, No.9 Building, Lijincheng Scientific & Technical park, Gongye East Road,

Longhua District, Shenzhen, Guangdong, China

Phone: 86-75583408210 (Sales Support)

Phone: 86-75583408510 (Technical Support)

Fax: 86-755-83408560

E-mail: technicalsupport@skylab.com.cn

Website: www.skylab.com.cnwww.skylabmodule.com