

VDB1608 Datasheet

Document Information		
Title	VDB1608 Datasheet	
Document Type	Datasheet	
Document Number	WN-19110026	
Version & Date	V1.02	8-Jun-2021
Classify	Public	

History Version:

Version	Content	Confirm	Date
V1.01	Initial Release	Sherman	2019.09.25
V1.02	Update the format	Wendy	20210608

95Power reserves all rights to this document and the information contained herein. Products, names, logos and designs described herein may in whole or in part be subject to intellectual property rights. Reproduction, use, modification or disclosure to third parties of this document or any part thereof without the express permission of 95Power is strictly prohibited.

The information contained herein is provided “as is” and 95Power assumes no liability for the use of the information. No warranty, either express or implied, is given, including but not limited, with respect to the accuracy, correctness, reliability and fitness for a particular purpose of the information. This document may be revised by 95Power at any time. For most recent documents, visit www.95power.com.cn.

Copyright © 2018, 95Power Information Technology Co., Ltd.

95POWER® is a registered trademark of 95Power Information Technology Co., Ltd. in China.

Content

1. Product introduction.....	4
2. Basic parameters.....	5
3. Software Application Guide.....	6
3.1 Download APP.....	6
3.2 Scan Bluetooth Beacon.....	6
3.3 Connect Bluetooth Beacon.....	7
3.4 Configuration Introduction.....	8
3.5 Modify Bluetooth Beacon Name.....	9
3.6 Modify UUID.....	10
3.7 Modify User service data.....	11
3.8 Modify Major/Minor.....	12
3.9 Modify Measured Power.....	13
3.10 Modify Transmitting Power.....	14
3.11 Modify Advertise Interval.....	15
3.12 Modify Password.....	16
3.13 Switch mode.....	17
3.14 Eddystone configuration page Introduction.....	18
3.15 Modify URL.....	19
3.16 Other Setting.....	20
4. Contact information.....	24

1. Product introduction

VDB1608 is a BLE(Bluetooth Low Energy) 5.0 card. It can broadcast its owner's personal identification information like name and number. And it can be used as indoor positioning card, which can be located by BLE gateway or other BLE locating base-station.

VDB1608 can also scan and forward at most 3 other BLE cards/beacons whose broadcasting frame pattern are the same as VDB1608's. In that way, the covering range of BLE gateway can be extended by card relay.

VDB1608 has a rechargeable 600mAh Li-Battery. It can be charged by a magnetic USB connector line. Please follow the magnetic draw direction which will combine the card and connector tightly. Do not let the battery run out for too long, which may damage the battery, and make it difficult to recharge.

VDB1608 has a power key which can also be used as SOS key. Short press can activate the SOS signal, and long press (>3S) can power on or power off the card.

VDB1608 has two LED. The red one will be on when the battery is charging. The blue one will be on when pressing the button.



Figure 1-1 VDB1608 top and bottom

2.Basic parameters

BLE5.0 TX power	+8dBm Max
BLE5.0 RX sensitivity	-95dBm(1Mbps BLE); -103dBm(125Kbps BLE)
Frequency	2400~2483.5MHz
Battery Life	TBD
Power consumption	TBD
LED	Charging LED, state LED
Key	Short press: SOS Long press: Turn on/off
Broadcasting distance	100 meters
Battery capacity	550mAh
Charging cable	Magnetic connect cable
Charging time	4 hours
Program updating	Support USB JLINK Support OTA(Over The Air, by bluetooth updating)
Operating Temp.	-20~60℃
IP grade	IP67 (water resistance)
Dimention	85.33*53.92*7.26mm
Accessory	Magnetic connect cable, Hanging belt

Table 2-1 Product parameters


3. Software Application Guide

3.1 Download APP

Skylab_xbeacon hasn't been put into the market yet. Please contact our sales for the latest APP.


3.2 Scan Bluetooth Beacon

Open the APP, if cell phone ask for permission to open bluetooth, please select yes. Then it will begin to scan the surrounding Bluetooth Beacons.

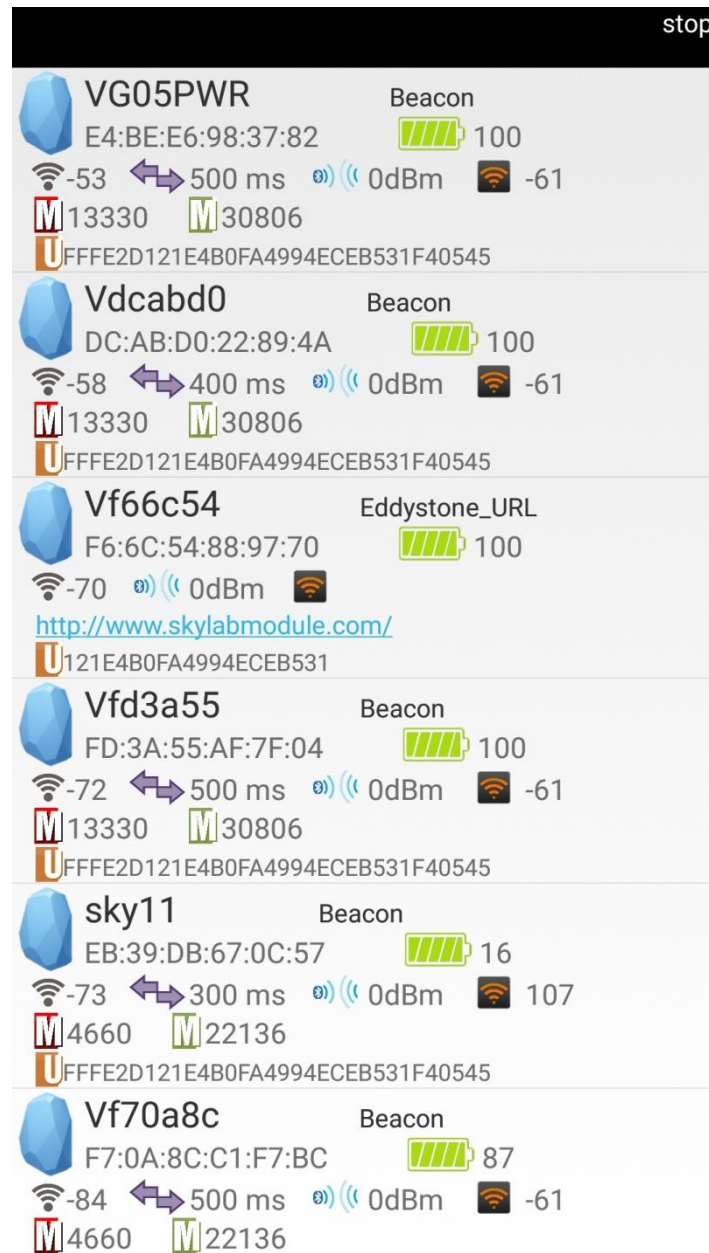


3.3 Connect Bluetooth Beacon

Click the Bluetooth Beacon to be connected, enter the password within 30 seconds, in order to obtain operating privileges .(Factory Password:1234)

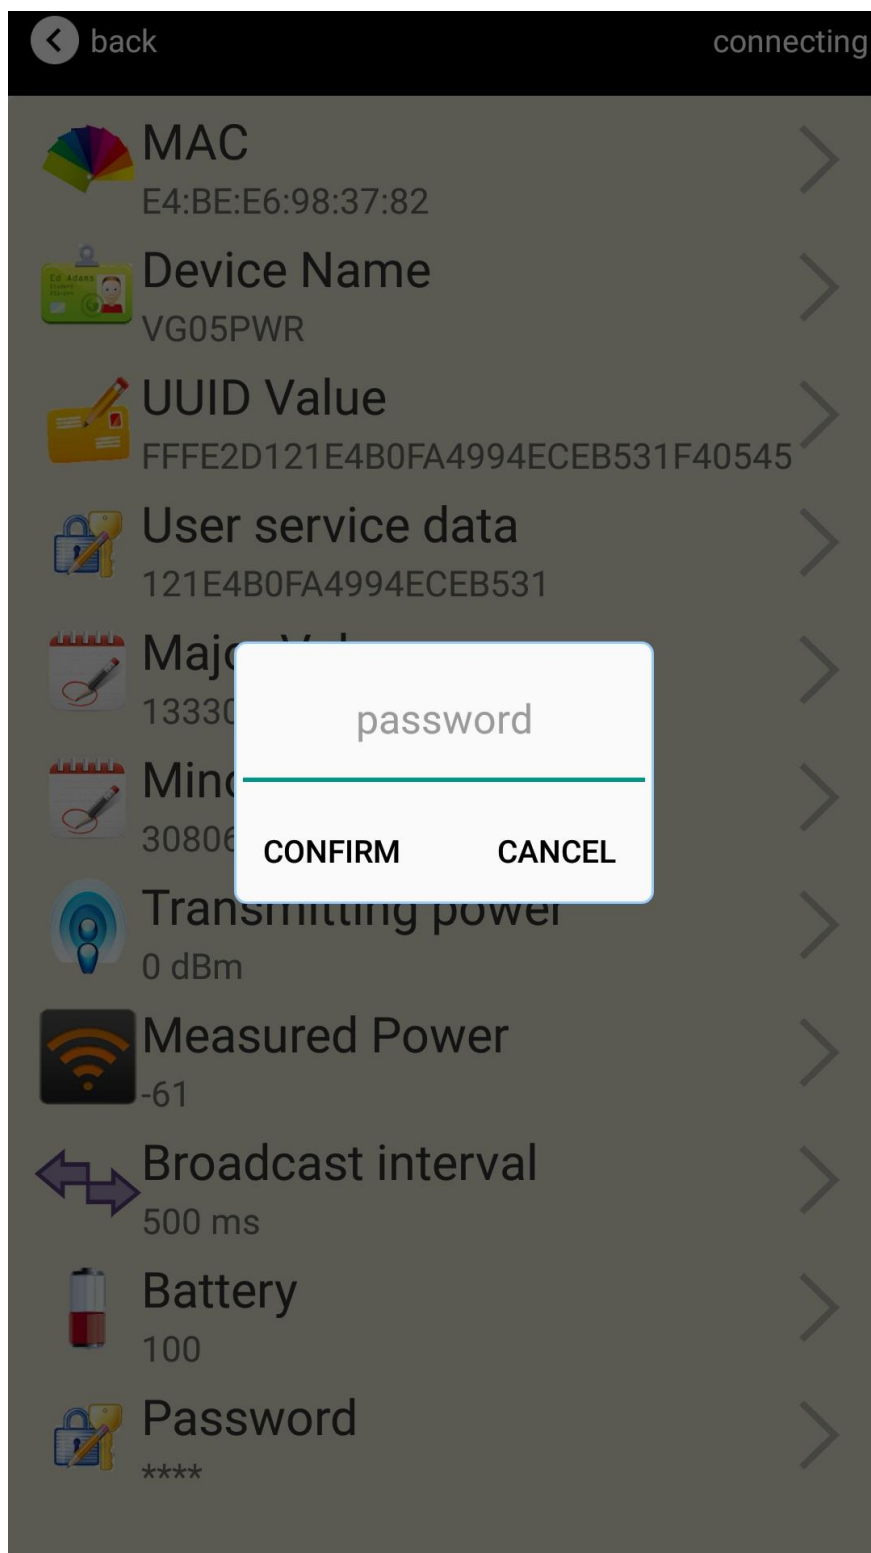

3.4 Configuration Introduction

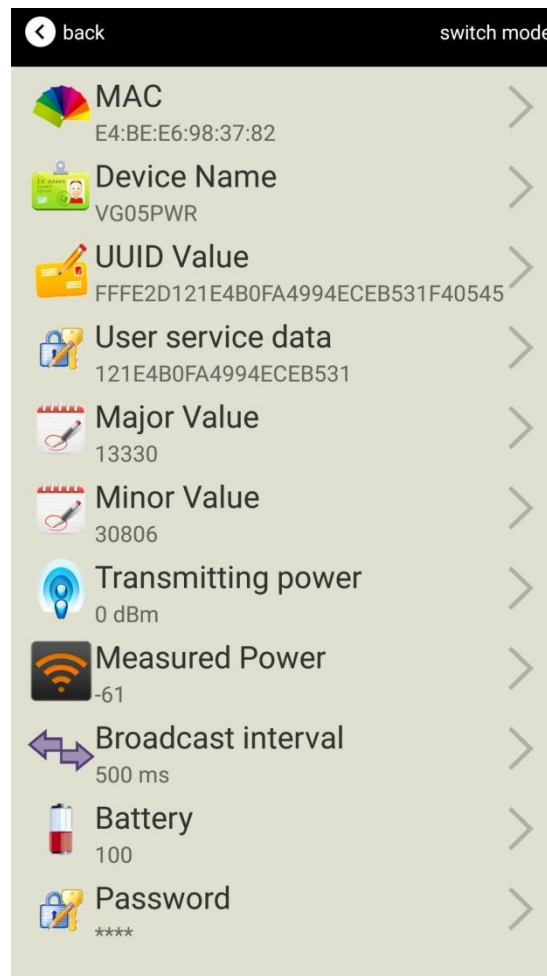

Introductions:

MAC: Chip MAC address

Name: The name of the Bluetooth Beacon which is selected.

UUID: 128-bit identifier according to ISO/IEC11578:1996 standard (32 hexadecimal digits)

Major: set 16-bit identifier (0-65535)

Minor: set 16-bit identifier (0-65535)

Measured Power: Signal strength at 1 meter (VDB1608 transmission power is 0dBm)

Transmit Power: VDB1608 transmit power

Advertise Interval: VDB1608 advertise interval


Battery Capacity: VDB1608 battery Capacity

Password: VDB1608 connection password

After the information is configured ,the configuration will take effect after the bluetooth connection is disconnected.

3.5 Modify Bluetooth Beacon Name

Click the “Device Name”, the following UI will be opened. Then enter a length of less than 12-bit English characters as VDB1608 device name in the following “Enter a Name” box. Then click “confirm to modify”.

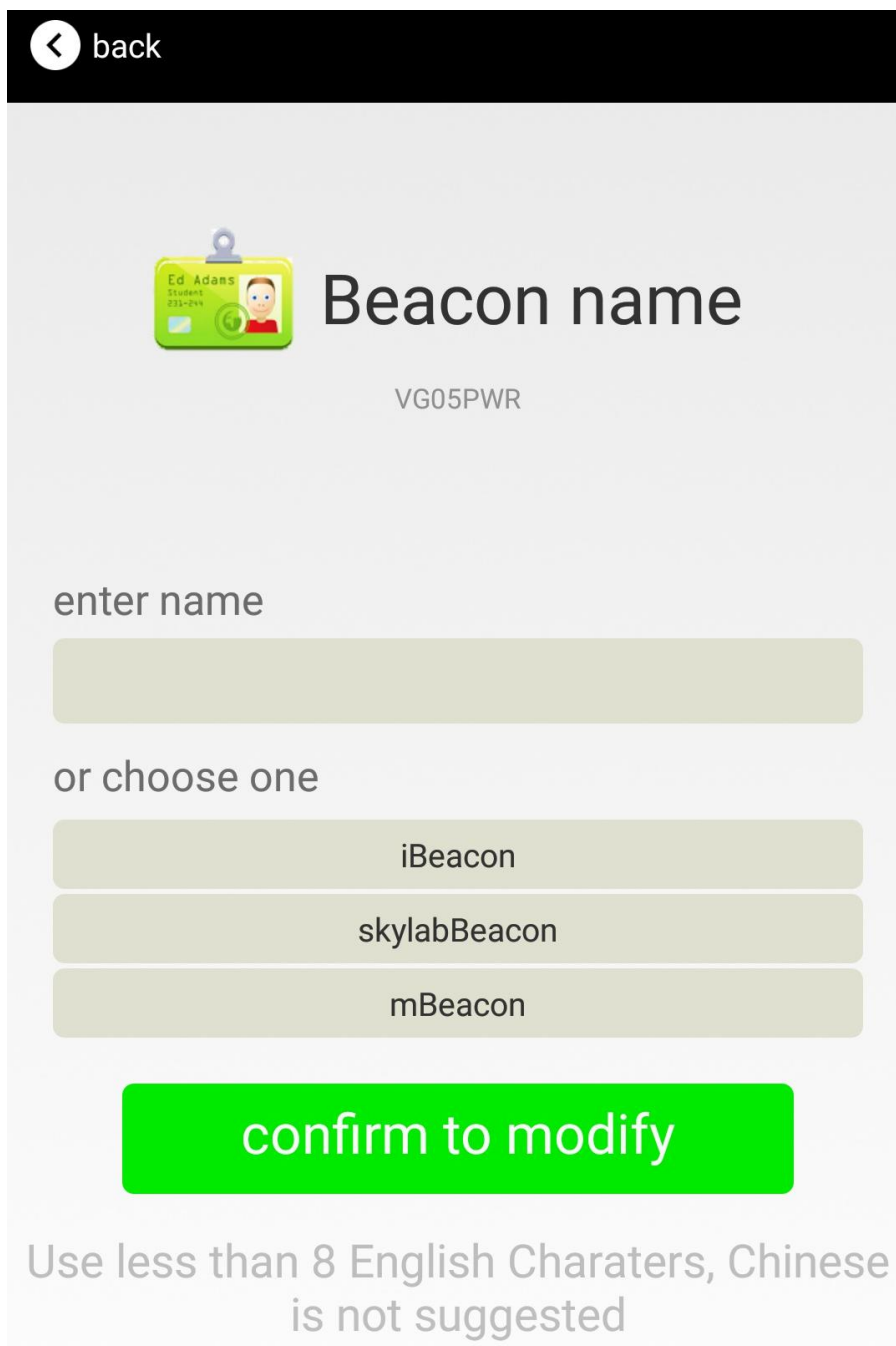

3.6 Modify UUID

Click the “UUID”, the following UI will be opened. Then and then enter a 32-byte string of sixteen as the UUID of VDB1608 in the following “Enter an UUID” box. Then click “confirm to modify”.

 back



UUID value

FFFE2D121E4B0FA4994ECEB531F40545

enter UUID

or choose one

AABBCCDDEEFF00112233445566778899

00112233445566778899AABBCCDDEEFF

12345678123456781234567812345678

confirm to modify

UUID is 16 bytes long. Use the 16 decimal data format .

3.7 Modify User service data

Click the " User service data ", the following interface will be opened. Then enter a Hexadecimal string of 24 word . Then click “confirm to modify”.

 back



User data

121E4B0FA4994ECEB531

enter user data

or choose one

AABBCCDDEEFF001122334455

00112233445566778899AABB

123456781234567812345678

confirm to modify

the length of user data can not over 13bytes , please use Hexadecimal format

3.8 Modify Major/Minor

Click the "Major"/"Minor", the following UI will be opened. Then set a value between 0~65535 as the Major/Minor value of the device. Then click "confirm to modify".

 back



Major

13330

Enter Major

or choose one

12345

22222

56666

confirm to modify

From 1 to 65535choose a value to match

Major

 back



Minor

30806

enter Minor

or choose one

12345

22222

56666

confirm to modify


From 1 to 65535choose a value to match

Major

3.9 Modify Measured Power


Click the “Measured Power”, the following UI will be opened. Then select a measured power range from -100dBm to -30dBm. The default is -61dBm. Then click “confirm to modify”.

Measured Power means, when a phone’s RSSI is -61dBm, it is about 1 meter from VDB1608.

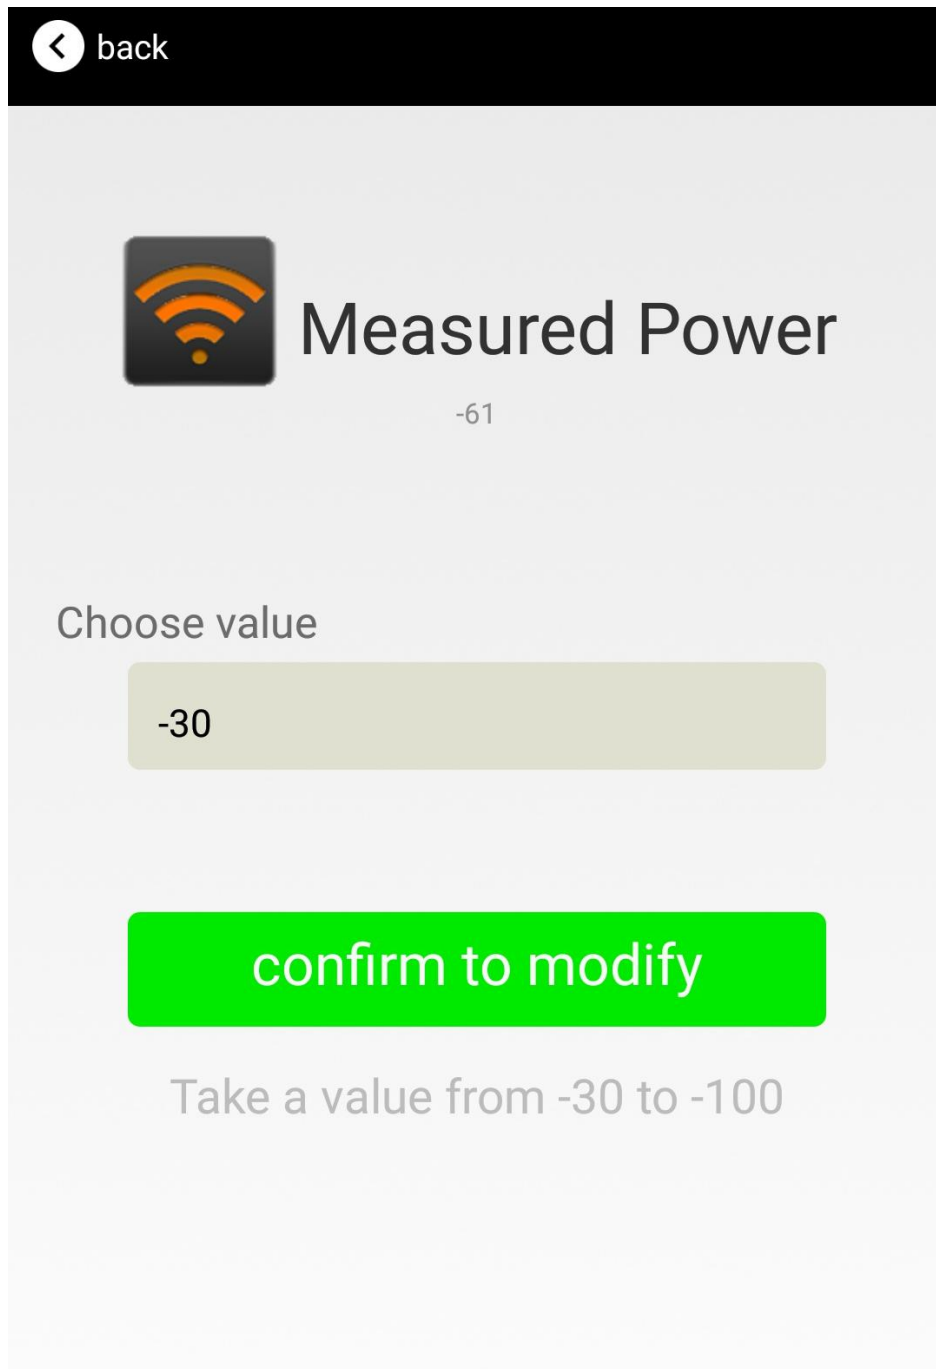

3.10 Modify Transmitting Power

Click the "Transmitting Power", the following UI will be opened. Then set a transmitting power, which can be set to: -16dBm, -12dBm, -8dBm, -4dBm, 0dBm, 4dBm(8dBm will be added in the future). Default Power is 0dBm. Then click "confirm to modify".

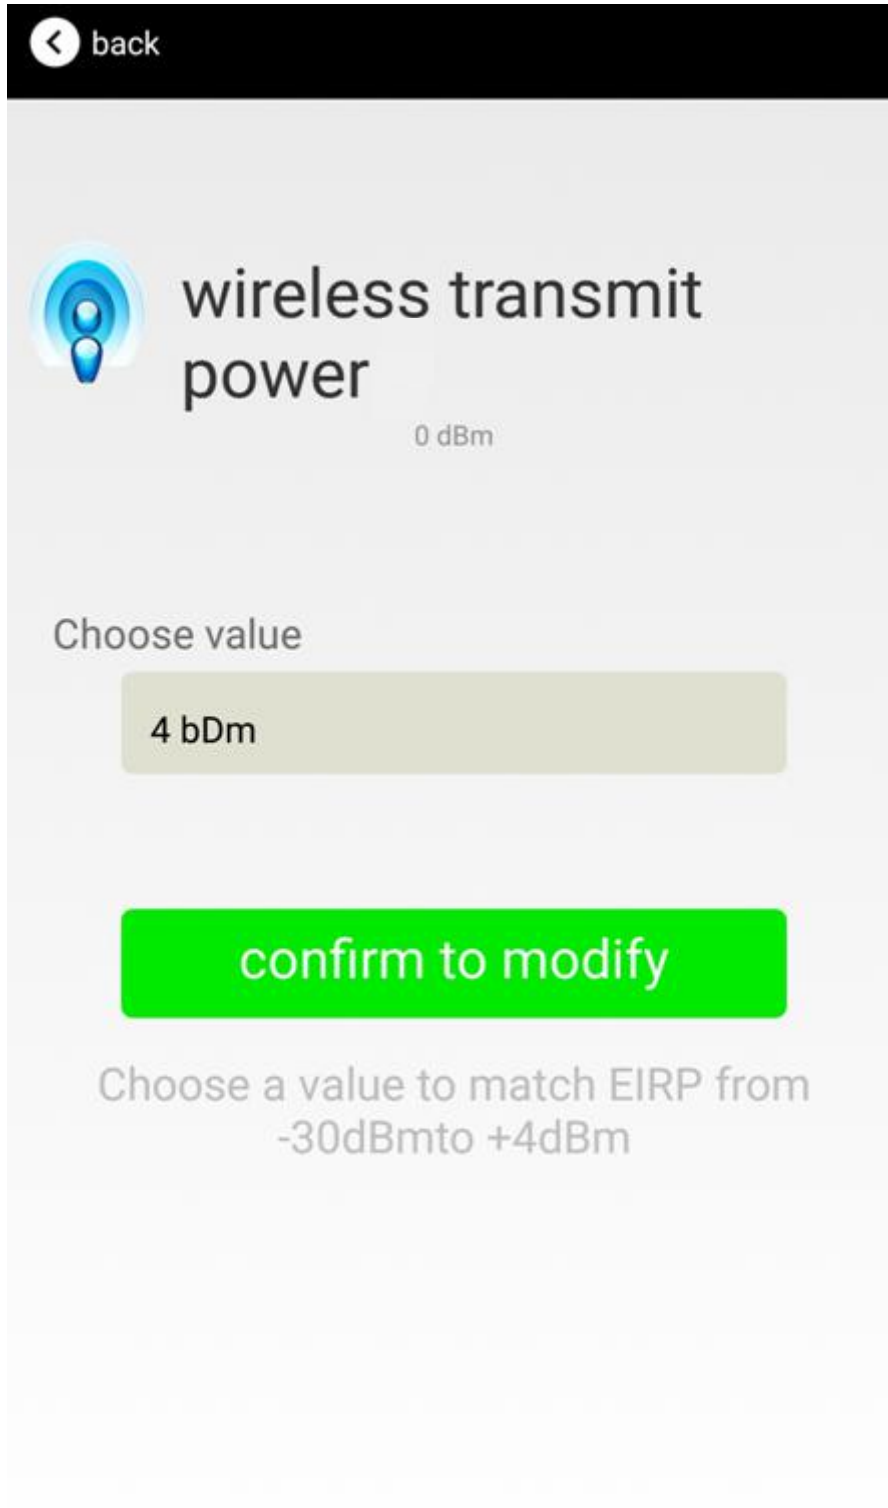

back

wireless transmit power
0 dBm

Choose value


4 bDm

confirm to modify

Choose a value to match EIRP from
-30dBm to +4dBm


3.11 Modify Advertise Interval

Click the "Advertise Interval" ,the following UI will be opened. Then set a advertise interval. Broadcasting interval can be set to 100ms, 200ms, 300ms, 400ms, 500ms, 600ms ,700ms, 800ms, 900ms and 1000ms. The default is 500ms. Then click “confirm to modify”.

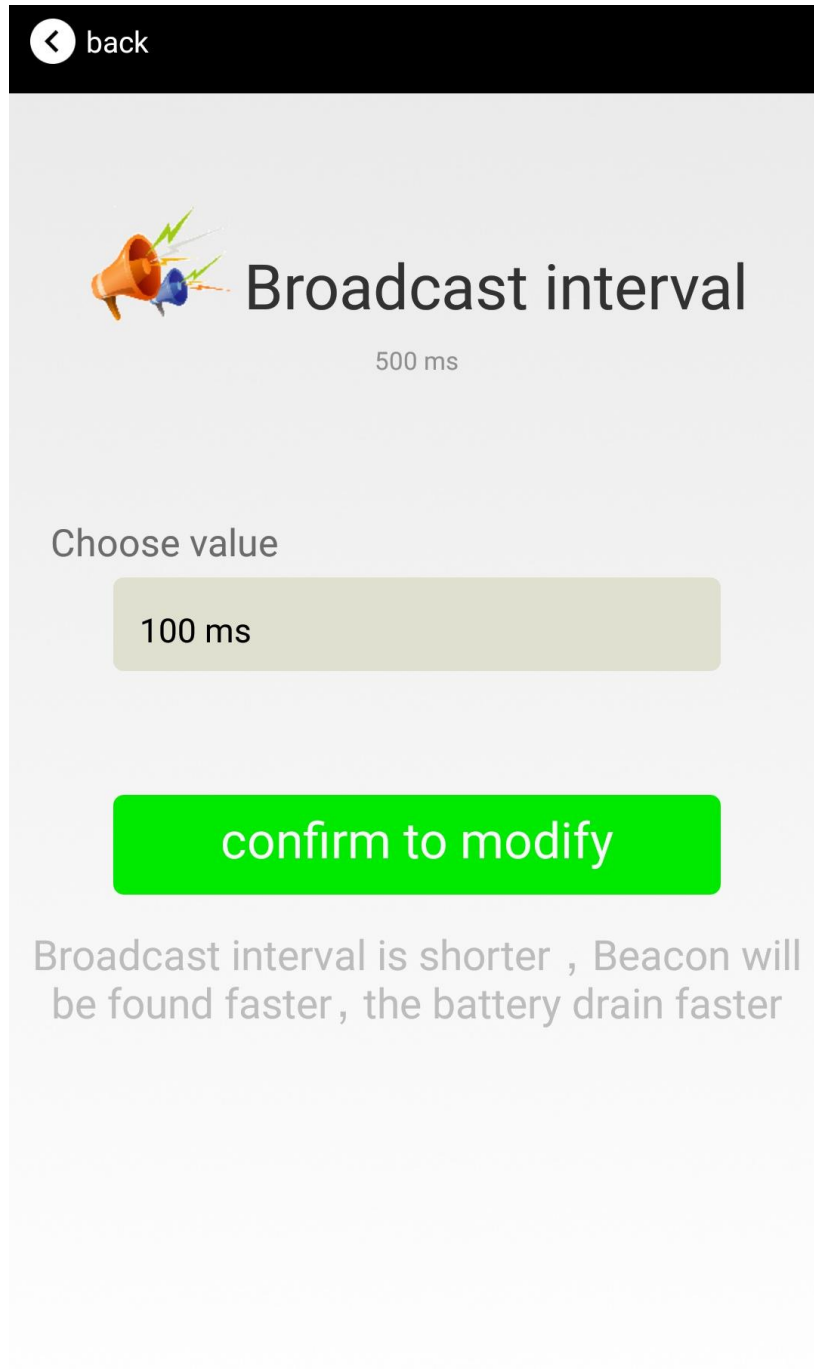

3.12 Modify Password


Click the “Password”, ,the following UI will be opened. Then and then enter the 4 characters as a connection password in the “Password” box, the default is 1234. Then click “confirm to modify”.

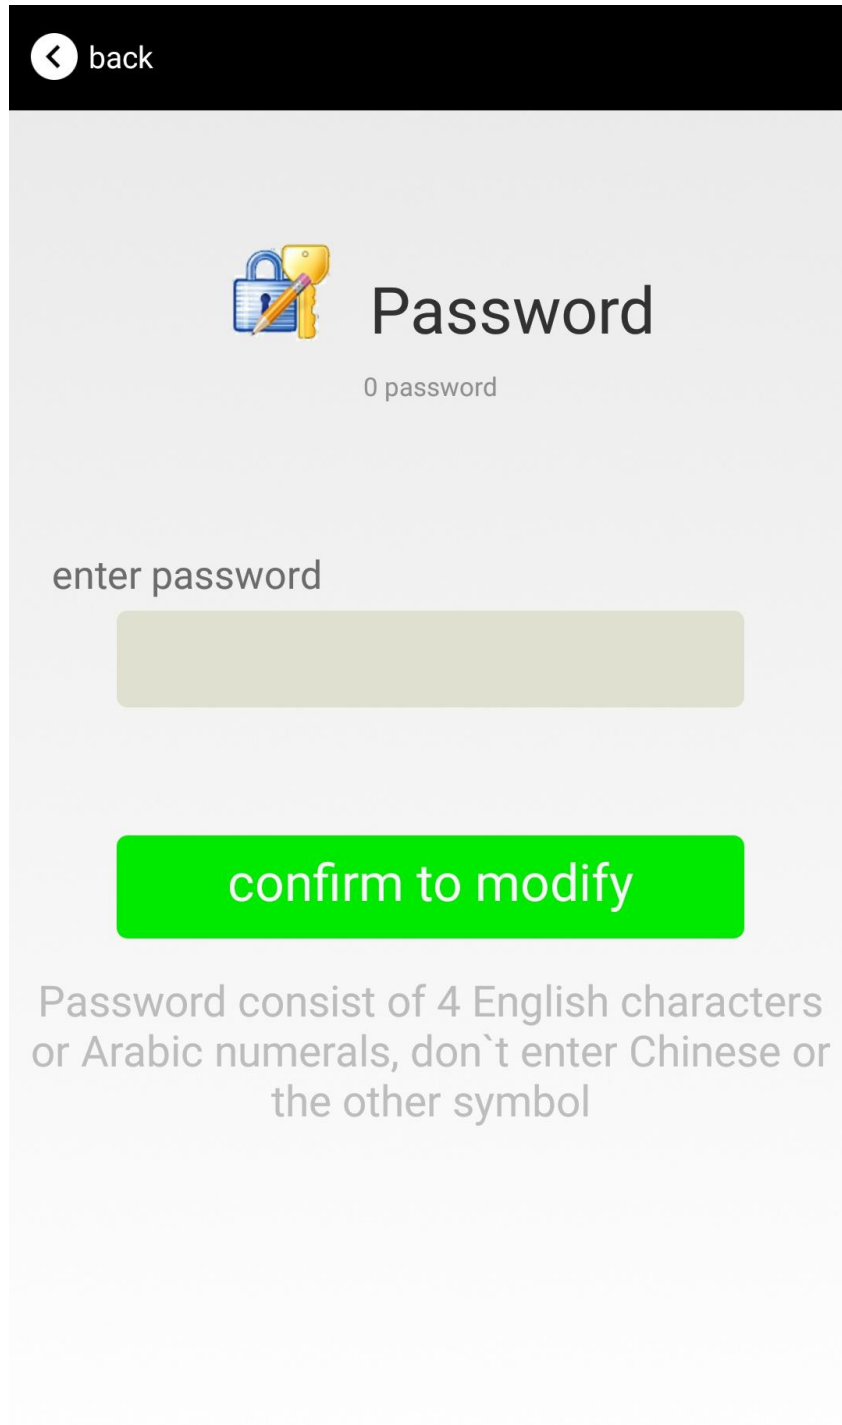


The screenshot shows a mobile application interface for modifying a password. At the top, there is a black header bar with a white back arrow and the text "back". Below the header, the main area has a light gray background. In the center, there is an icon of a blue padlock with a yellow key and a red pencil, followed by the word "Password" in a large, bold, black font. Below this, the text "0 password" is displayed in a smaller, gray font. Further down, the text "enter password" is shown above a light beige rectangular input field. Below the input field is a prominent green button with the text "confirm to modify" in white. At the bottom, a gray text box contains the instruction: "Password consist of 4 English characters or Arabic numerals, don't enter Chinese or the other symbol".

3.13 Switch mode

Click “switch mode” on the upper right corner, the mode selection window will be opened. Then you can choose iBeacon or Eddystone mode. Default mode is iBeacon.

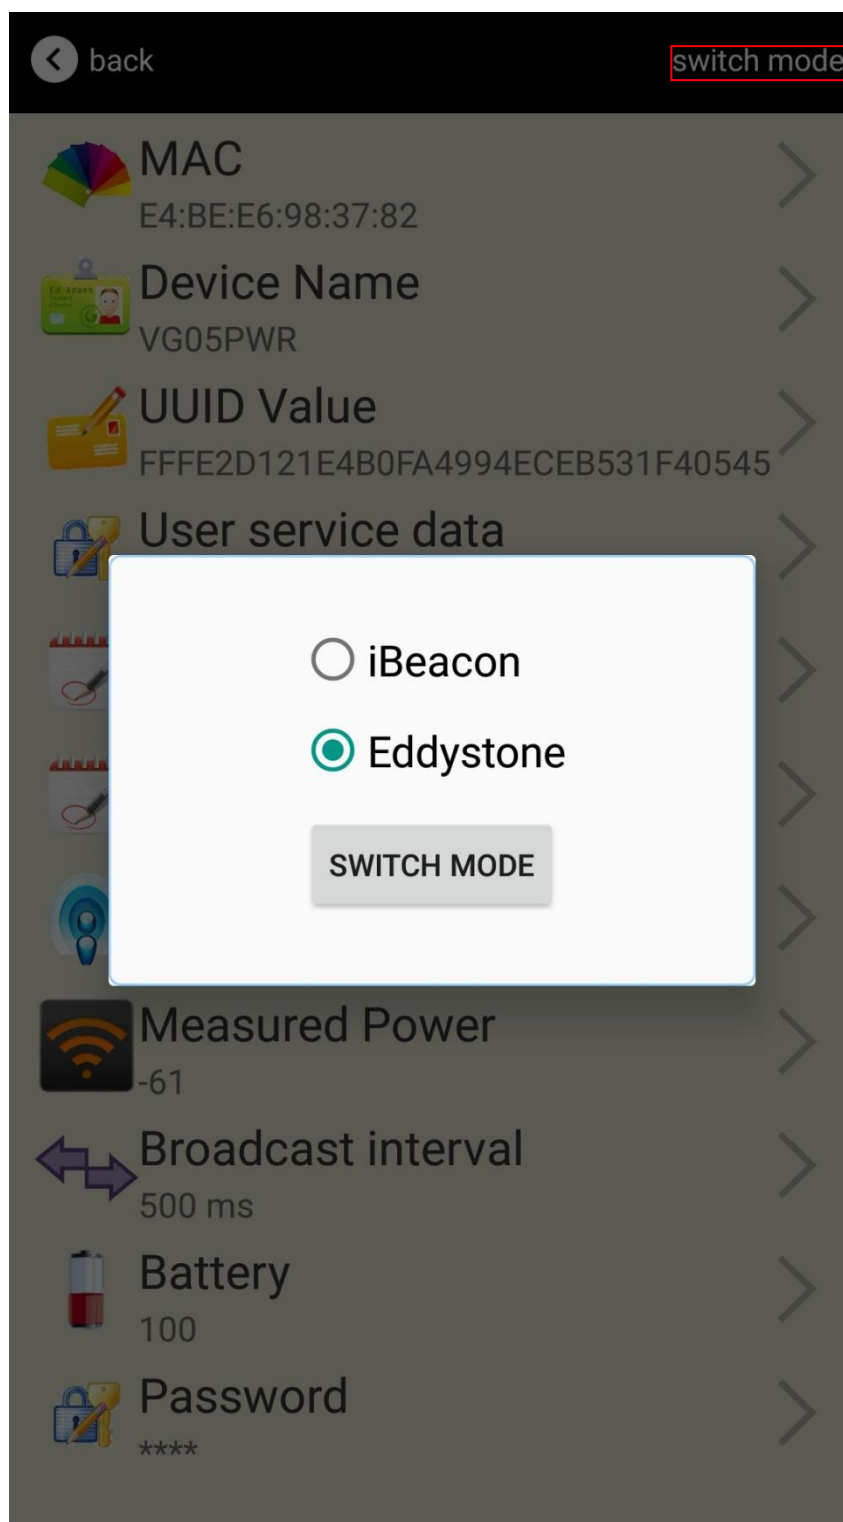

3.14 Eddystone configuration page Introduction

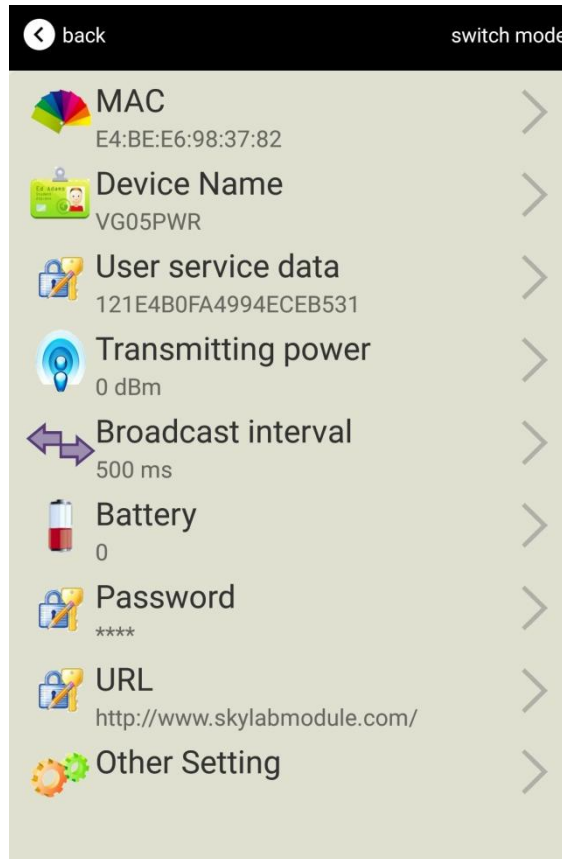

Introduction:

MAC: Chip MAC address

Name: The name of the Bluetooth Beacon which is selected.

User service data: User-defined data in broadcasting

Transmit Power: VDB1608 transmit power

Advertise Interval: VDB1608 advertise interval

Battery Capacity: VDB1608 battery Capacity

Password: VDB1608 connection password


URL : modify the Frame field information in Eddystone. The default format is URL. Other Formats can be selected by other setting

Other setting :Format selection of Frame field information in Eddystone.

After the information is configured ,the configuration will take effect after the bluetooth connection is disconnected.

3.15 Modify URL

Click "URL", the following UI will be opened. Then input at most 16 characters as broadcasting URL. Then click "confirm to modify".

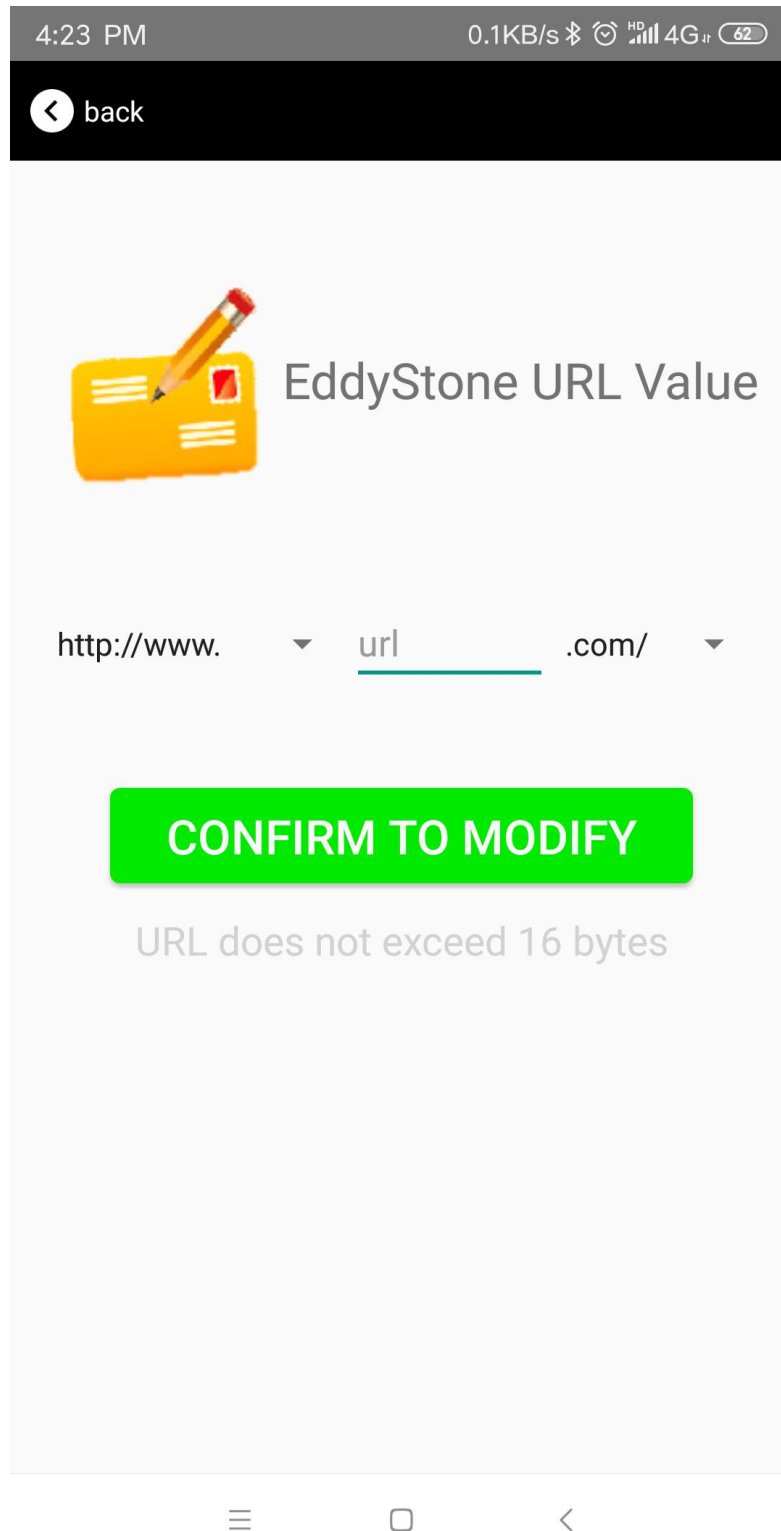

4:23 PM 0.1KB/s 0.1KB/s 4G 62

back

 EddyStone URL Value


http://www. url .com/

CONFIRM TO MODIFY

URL does not exceed 16 bytes

3.16 Other Setting

Click “Other setting”, the following UI will be opened. The following three options are UID, EID and TLM.

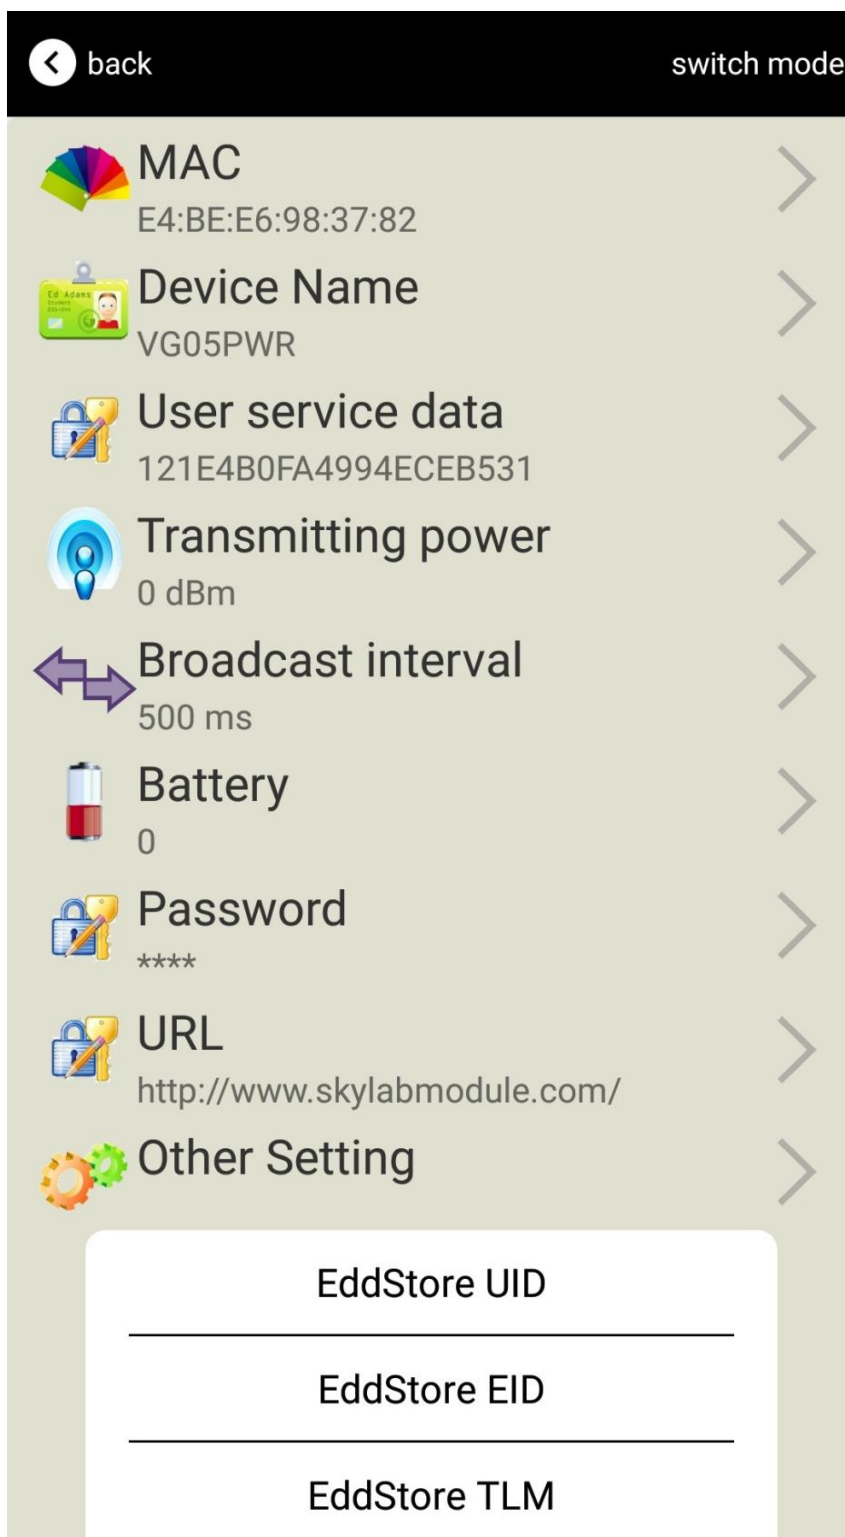

Select and set UID information:

NameSpace(10 bytes) and Instance(6 bytes) are set,respectively.

 back



EddyStone Uid Value

enter NameSpace value

10 byte input 16 hexadecimal format

enter Instance value

6 byte input 16 hexadecimal format

CONFIRM TO MODIFY

Select and set EID information:

Set EID information, maximum 8 bytes.

 back



Encrypted value

Enter Encrypted

or choose one

AABBCCDDEEFF0011

0011223344556677

1234567812345678

CONFIRM TO MODIFY

Use less than 8 English Charaters, Chinese is not suggested

Select and set TLM information:

Select "Encrypted TLM specification" (suggested), and input encrypted TLM data(at most 12 byte), 16-bit Salt(2 byte) and 16-bit Message Integrity check(2 byte).

 back



TLM data value

☒ Encrypted TLM specification

☐ Unencrypted TLM specification

Encrypted TLM data 12 byte

16-bit Salt 2 byte

16 bit Message Integrity Check 2 byte

CONFIRM TO MODIFY

4. Contact information

95Power Information Technology Co., Ltd

深圳市微能信息科技有限公司

Address: 6 Floor, Building 9, Lijincheng Scientific & Technical Park, Gongye East Road, Longhua District, Shenzhen

Tel: 86-755 23779409

Fax: 86-755 23779409

E-mail: sales@95power.com.cn

Website: www.95power.com.cn